


BALLAST SOUNDING PIPE 04"
 BALLAST AIR PIPE 04"

S
T
E
R
N

1 2 3 4 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22

B
O
W

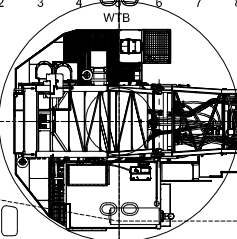

BALLAST AIR PIPE 04"
 BALLAST AIR PIPE 04"
 BALLAST SOUNDING PIPE 04"
 BALLAST AIR PIPE 04"
 BALLAST SOUNDING PIPE 04"

BALLAST SOUNDING PIPE 04"

E.COOL TRANSF 04"
 E.COOL AIR PIPE 04"
 E.COOL AIR PIPE 04"
 E.COOL AIR PIPE 04"
 FUEL OIL TRANSF 01.5"

